

FIG. 1A

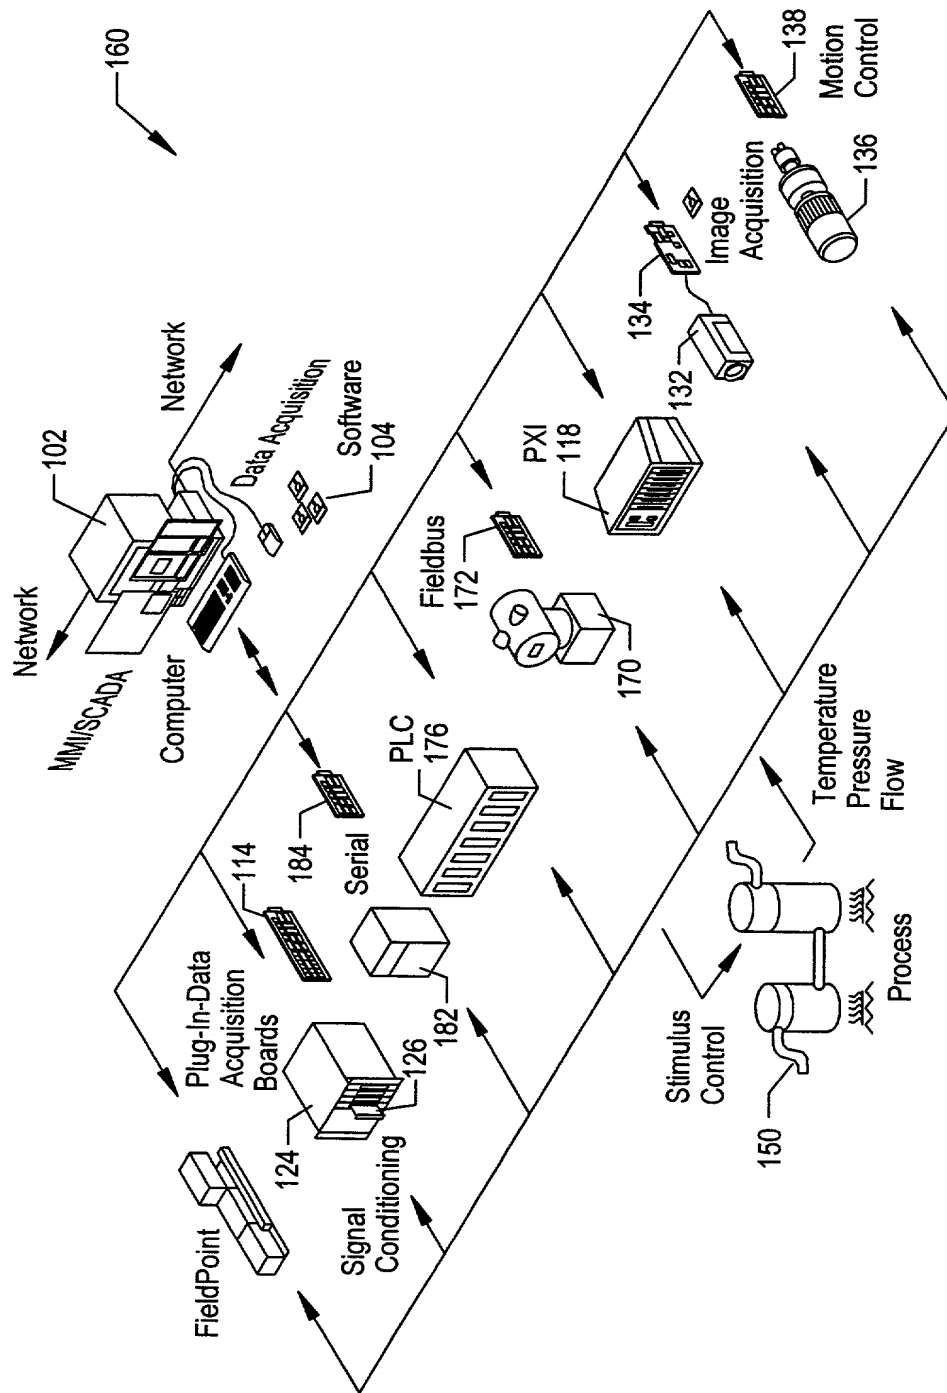


FIG. 1B

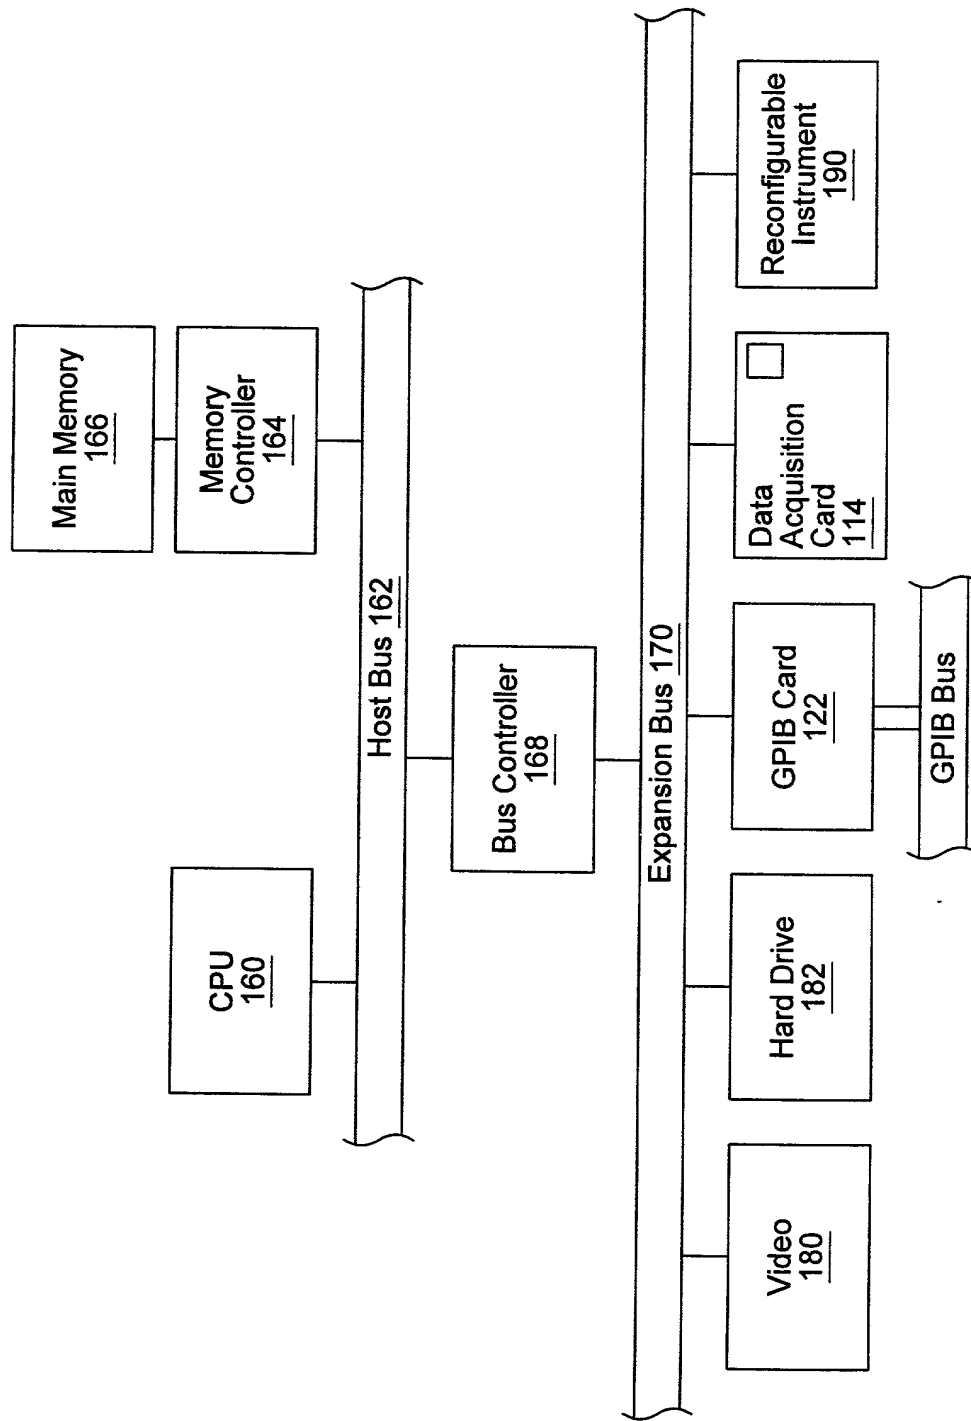


FIG. 2

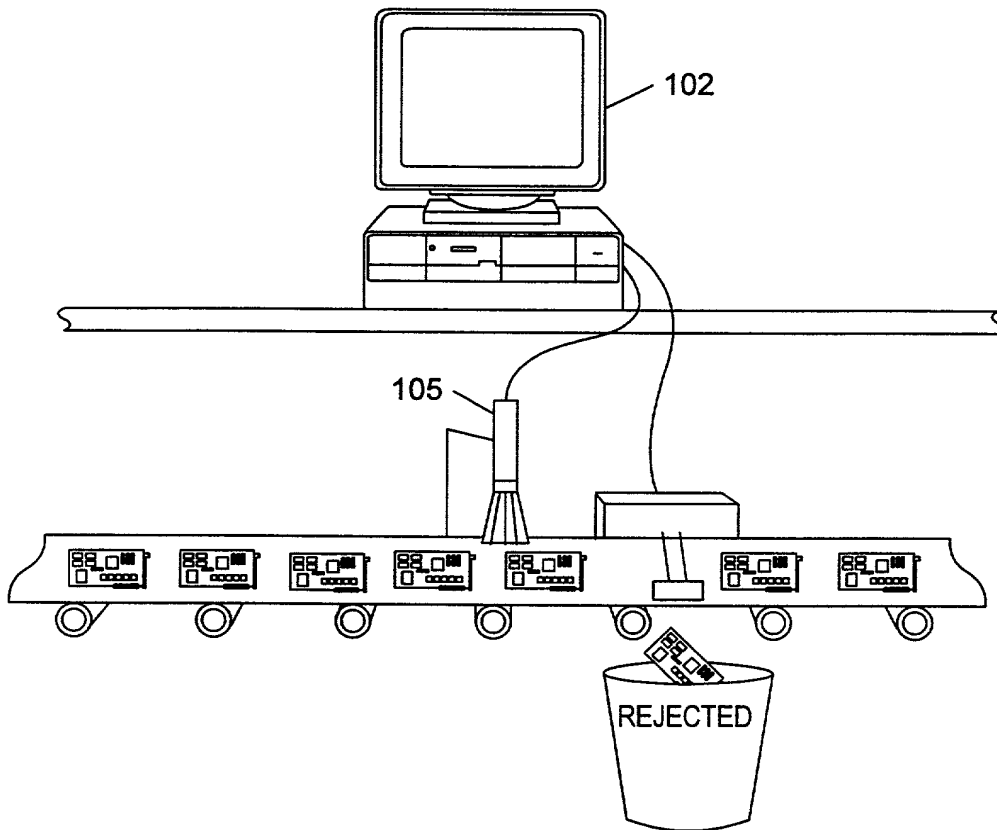


FIG. 3

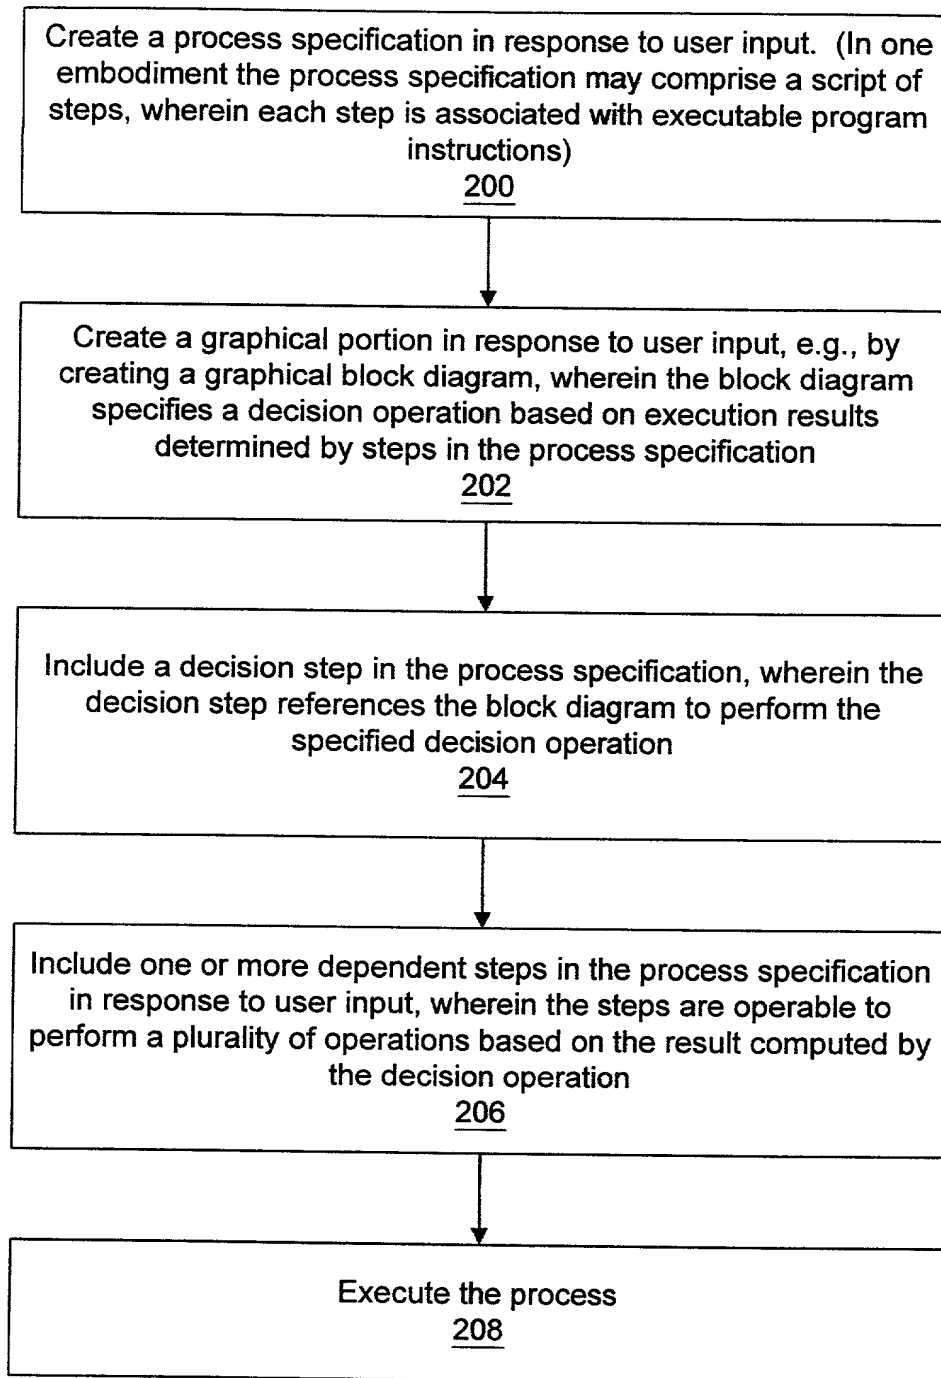


FIG. 4

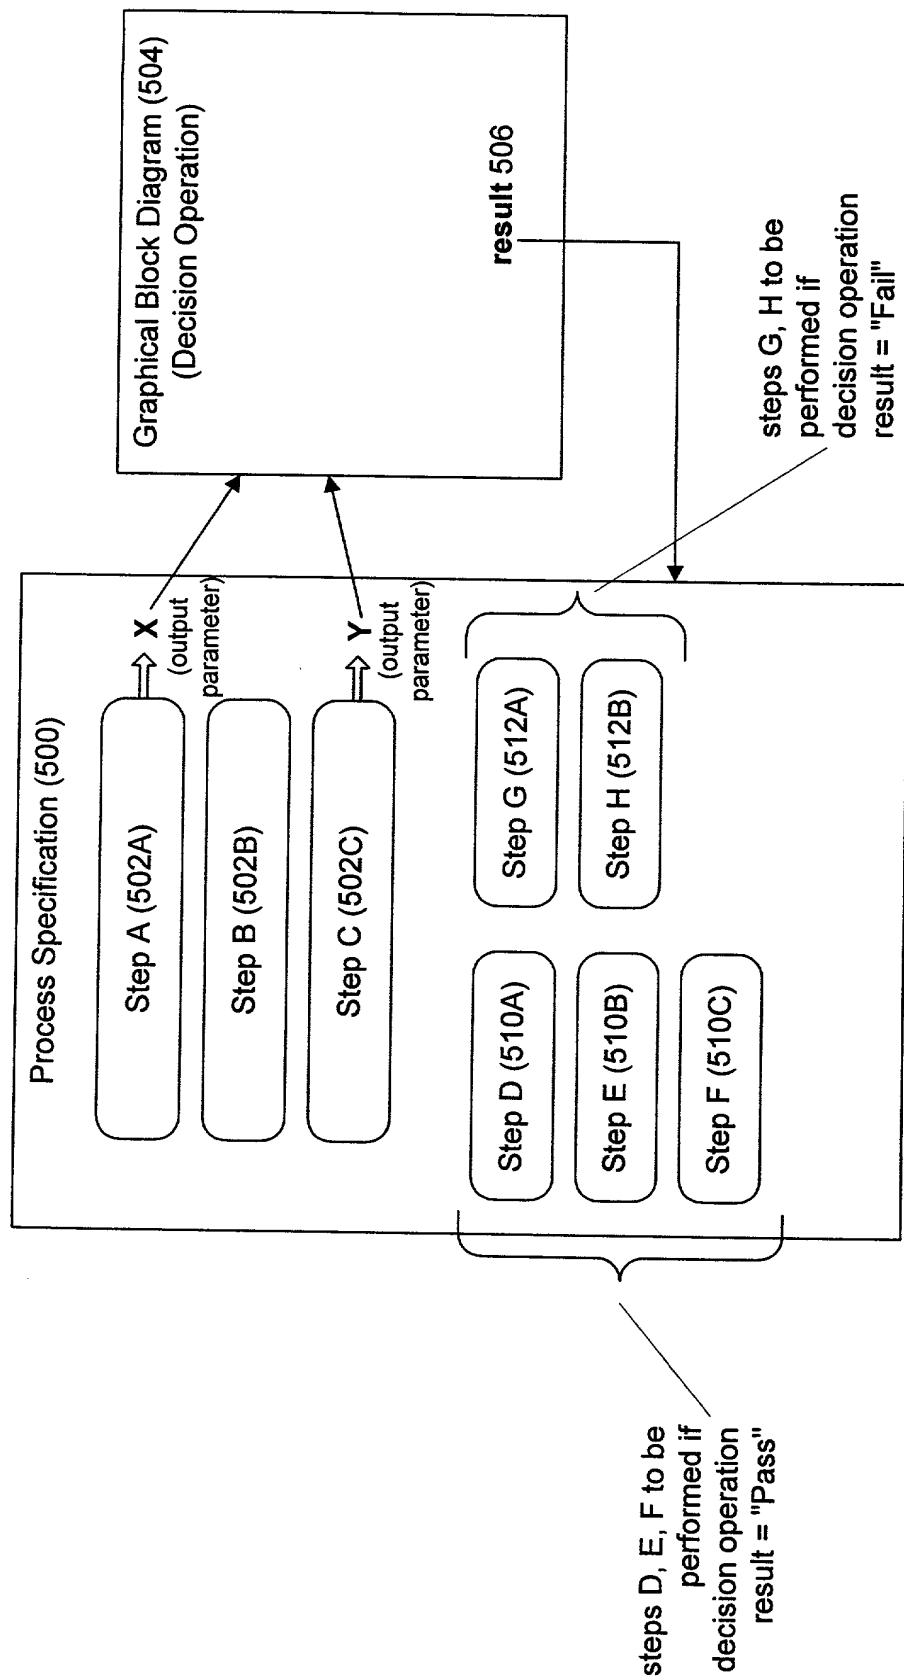


FIG. 5

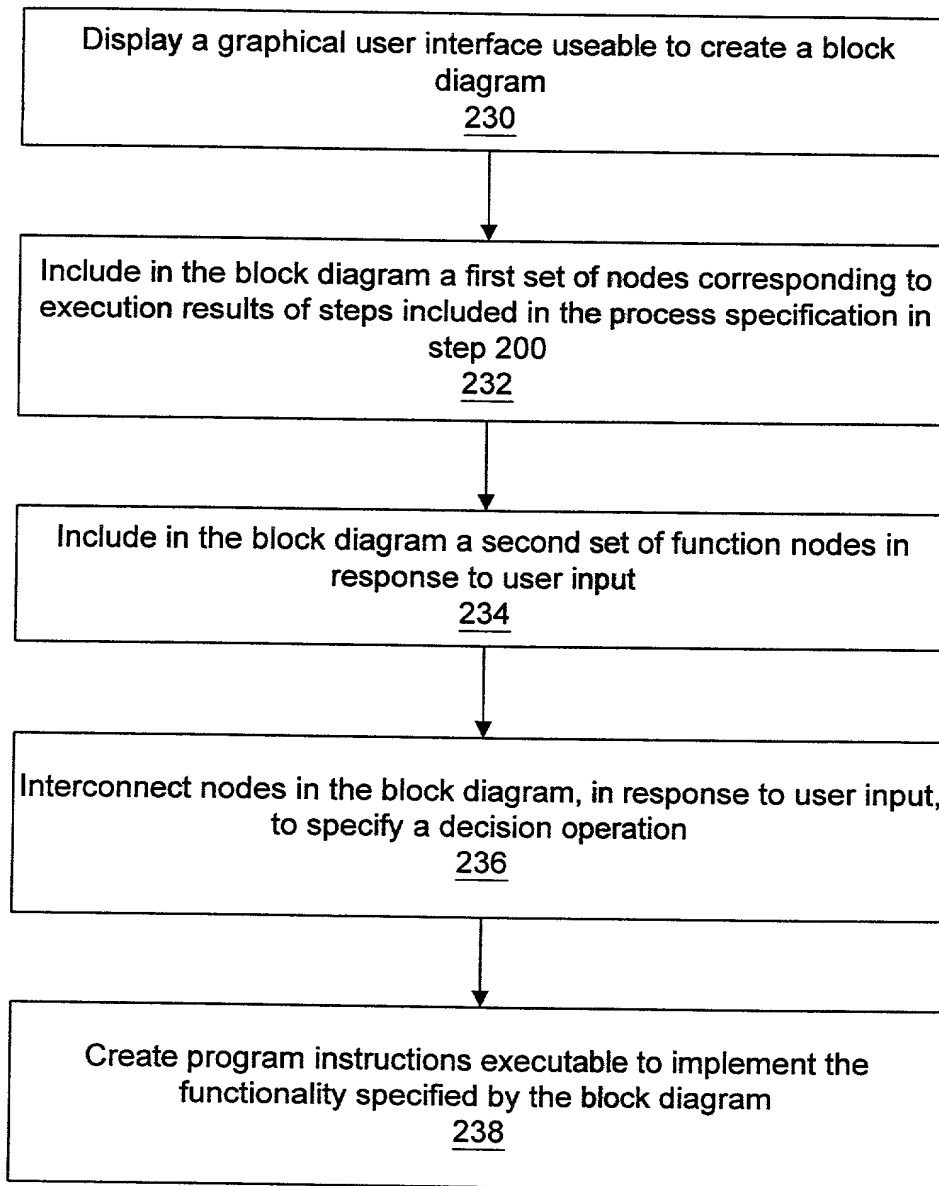


FIG. 6

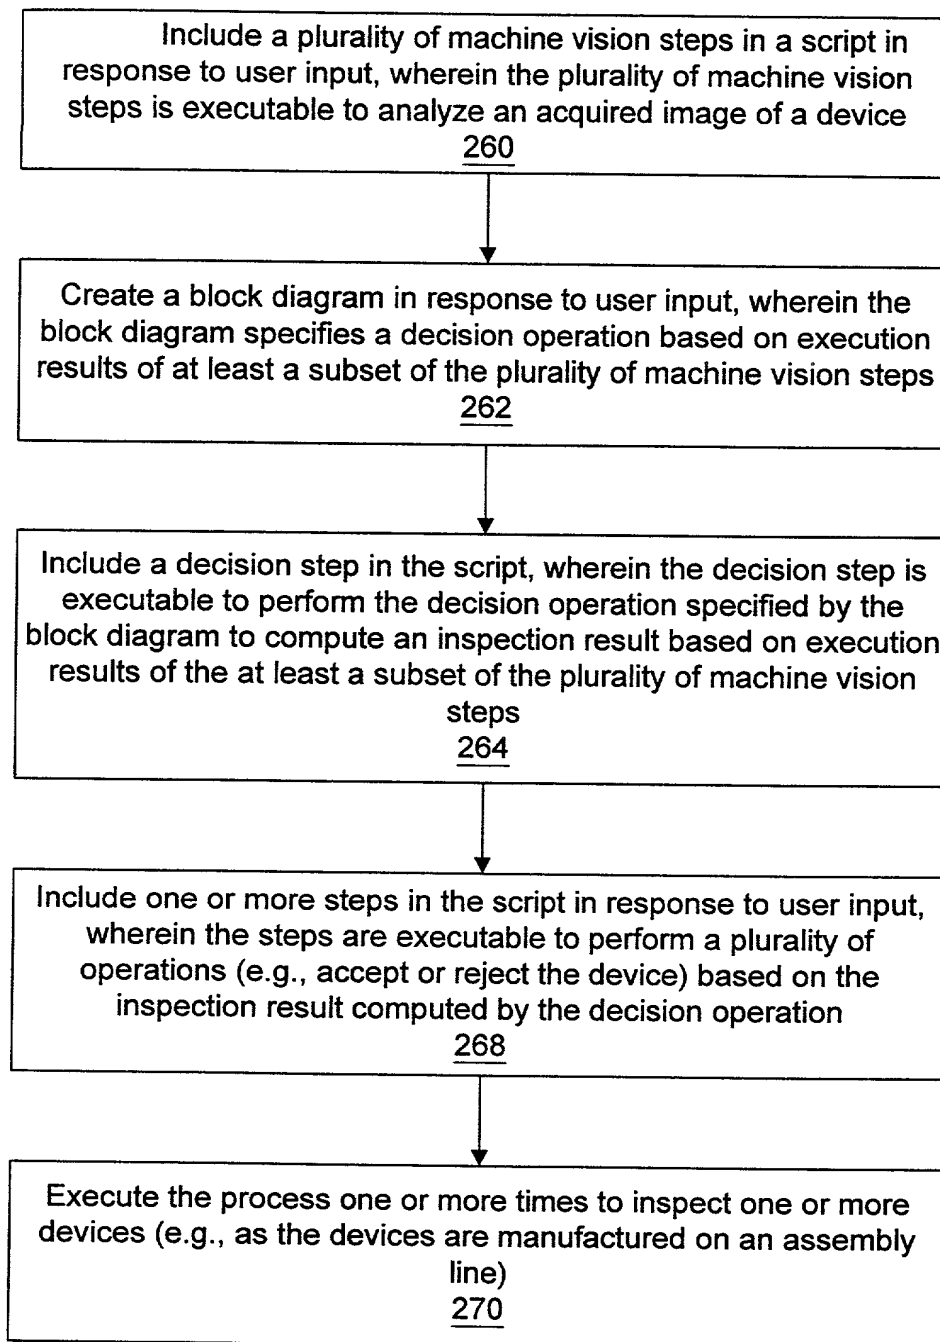


FIG. 7



FIG. 8

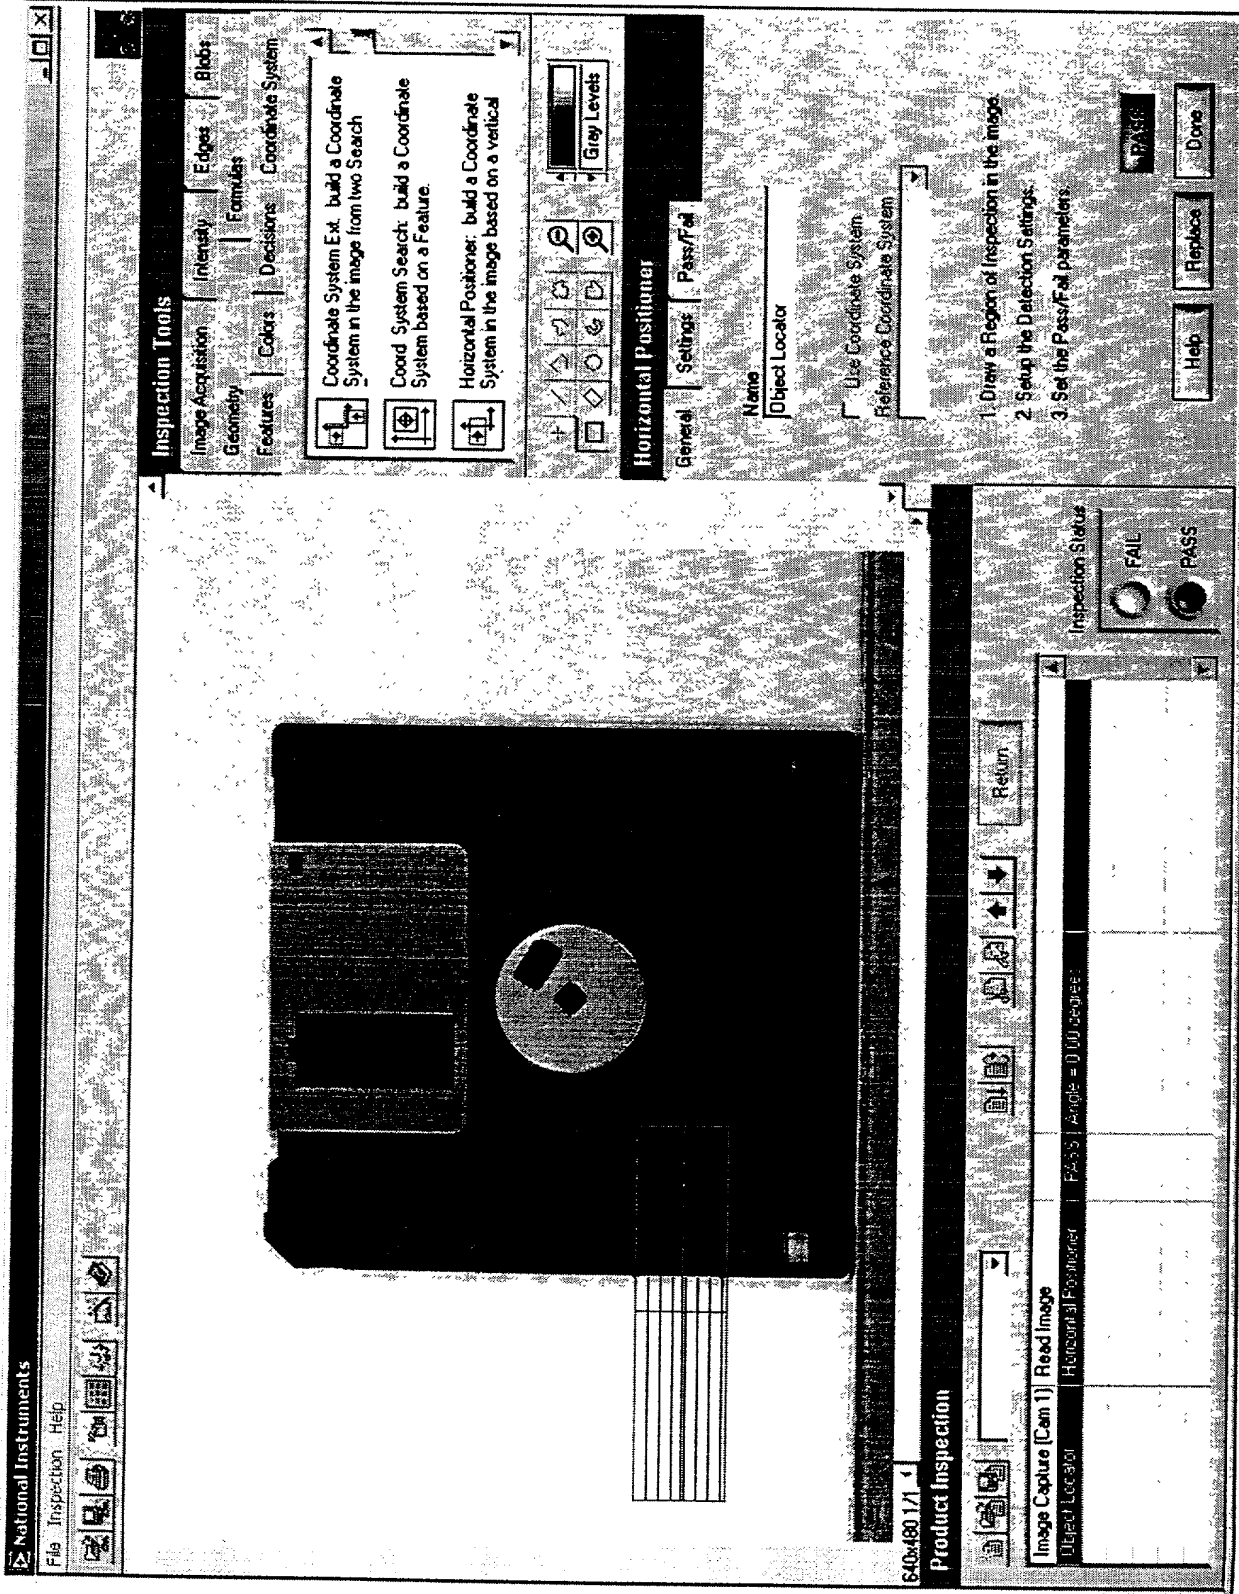


FIG. 9

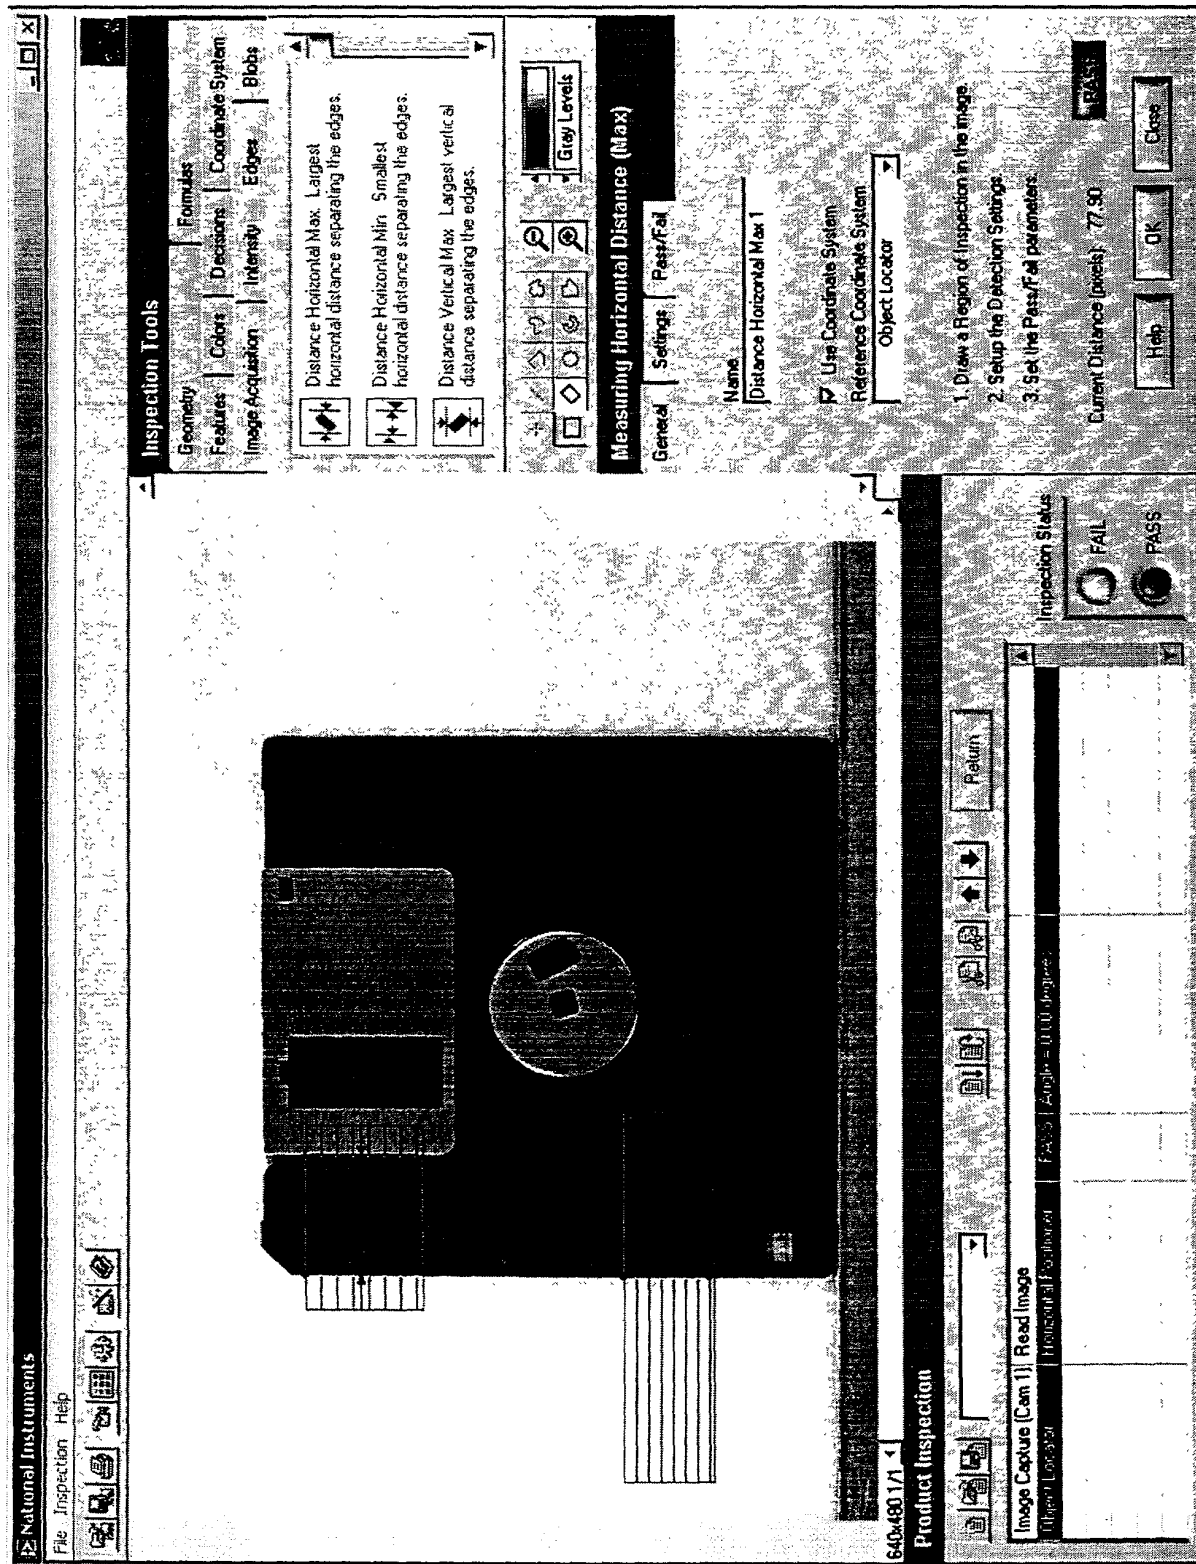


FIG. 10

Measuring Horizontal Distance (Max)

General

Settings

Pass/Fail

Name

Flap Position

☒ Use Coordinate System

Reference Coordinate System

Object Locator

1. Draw a Region of Inspection in the image.

2. Setup the Detection Settings.

3. Set the Pass/Fail parameters.

Current Distance (pixels): 77 90

Help

OK

Close

Pass

FIG. 11

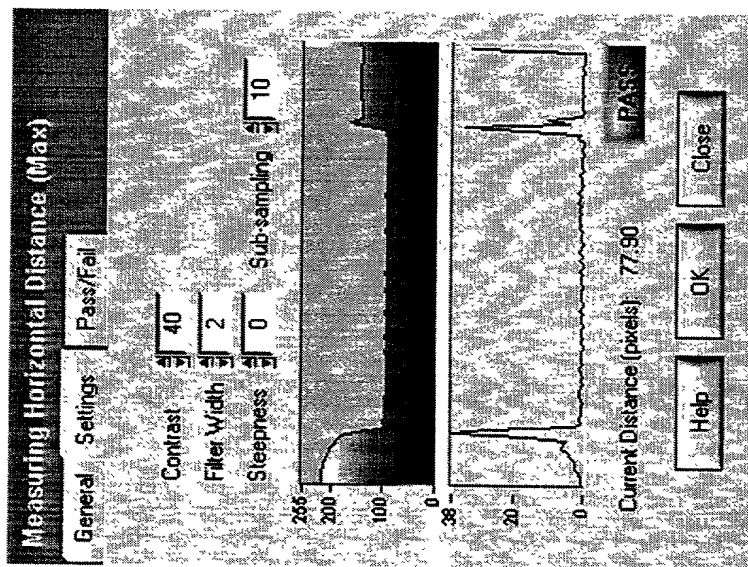


FIG. 12

Measuring Horizontal Distance (Max)

General Settings Pass/Fail

Pass Conditions

☒ Minimum Distance (Pixels) 75.00

☒ Maximum Distance (Pixels) 80.00

Current Distance (pixels): 79.90

PASS

Help Replace Done

FIG. 13

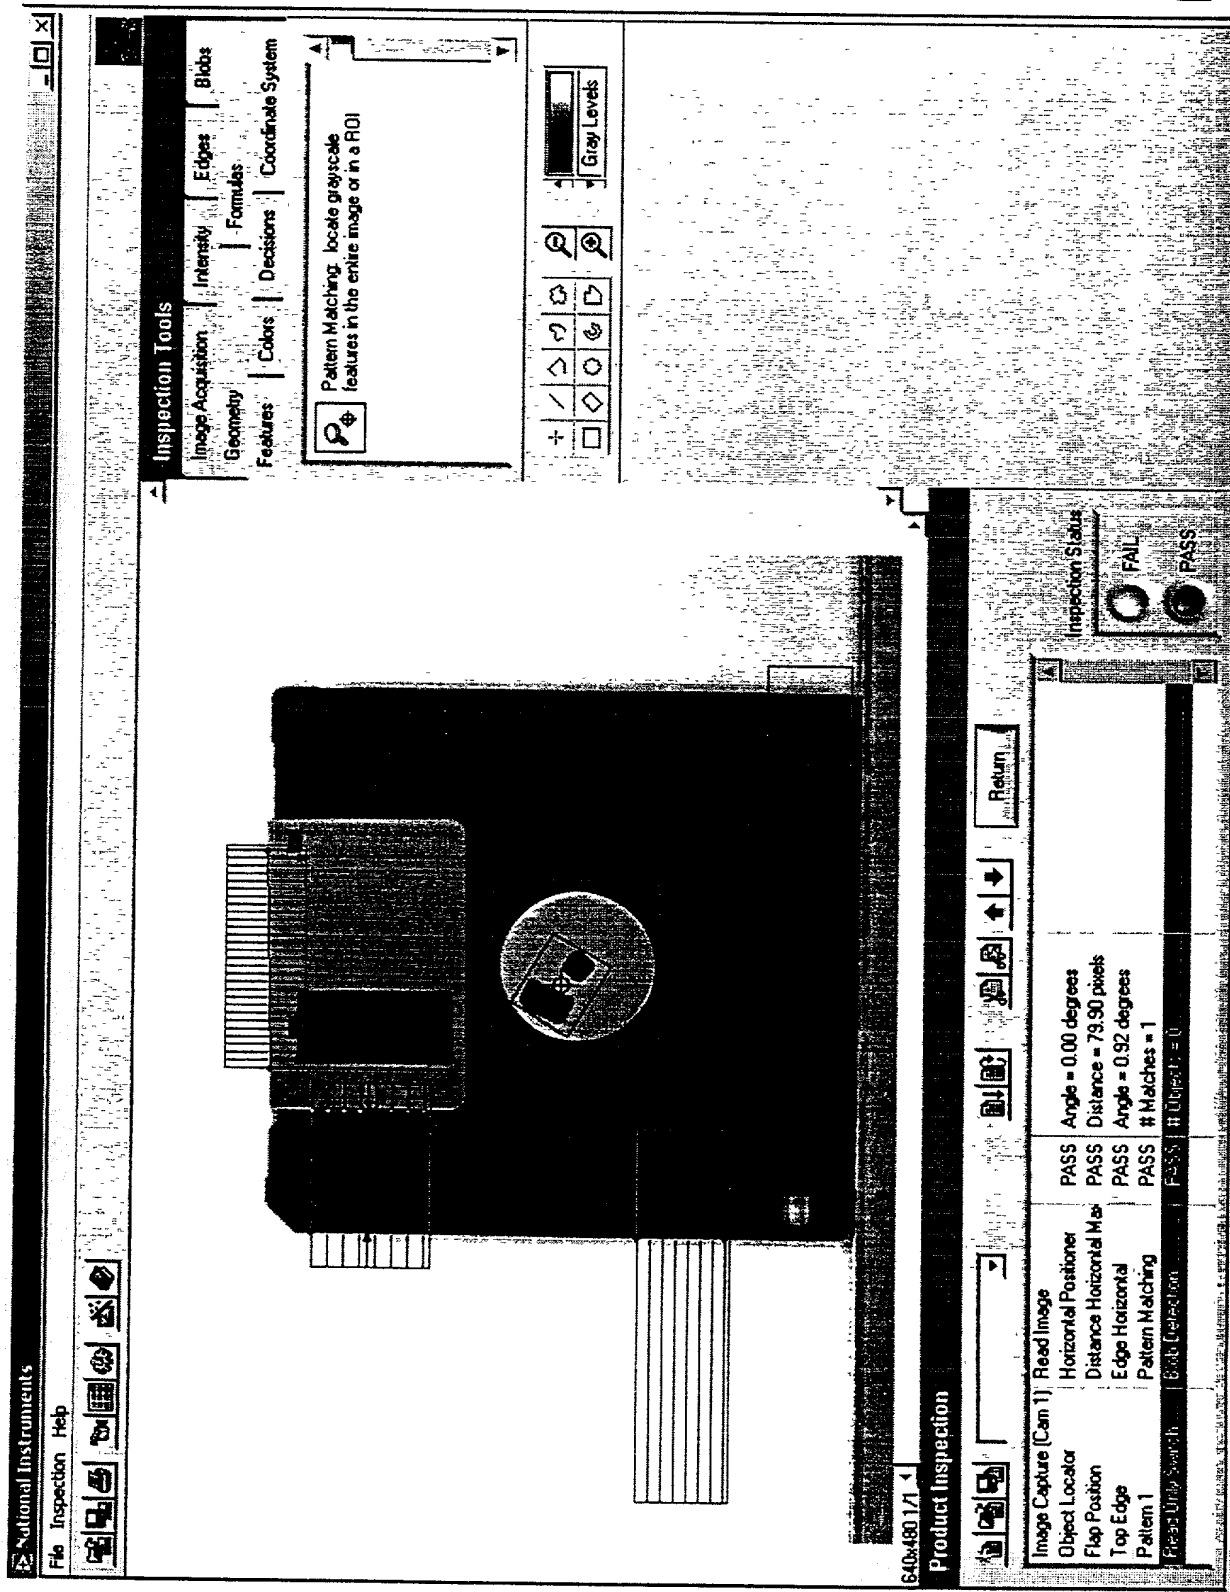


FIG. 14

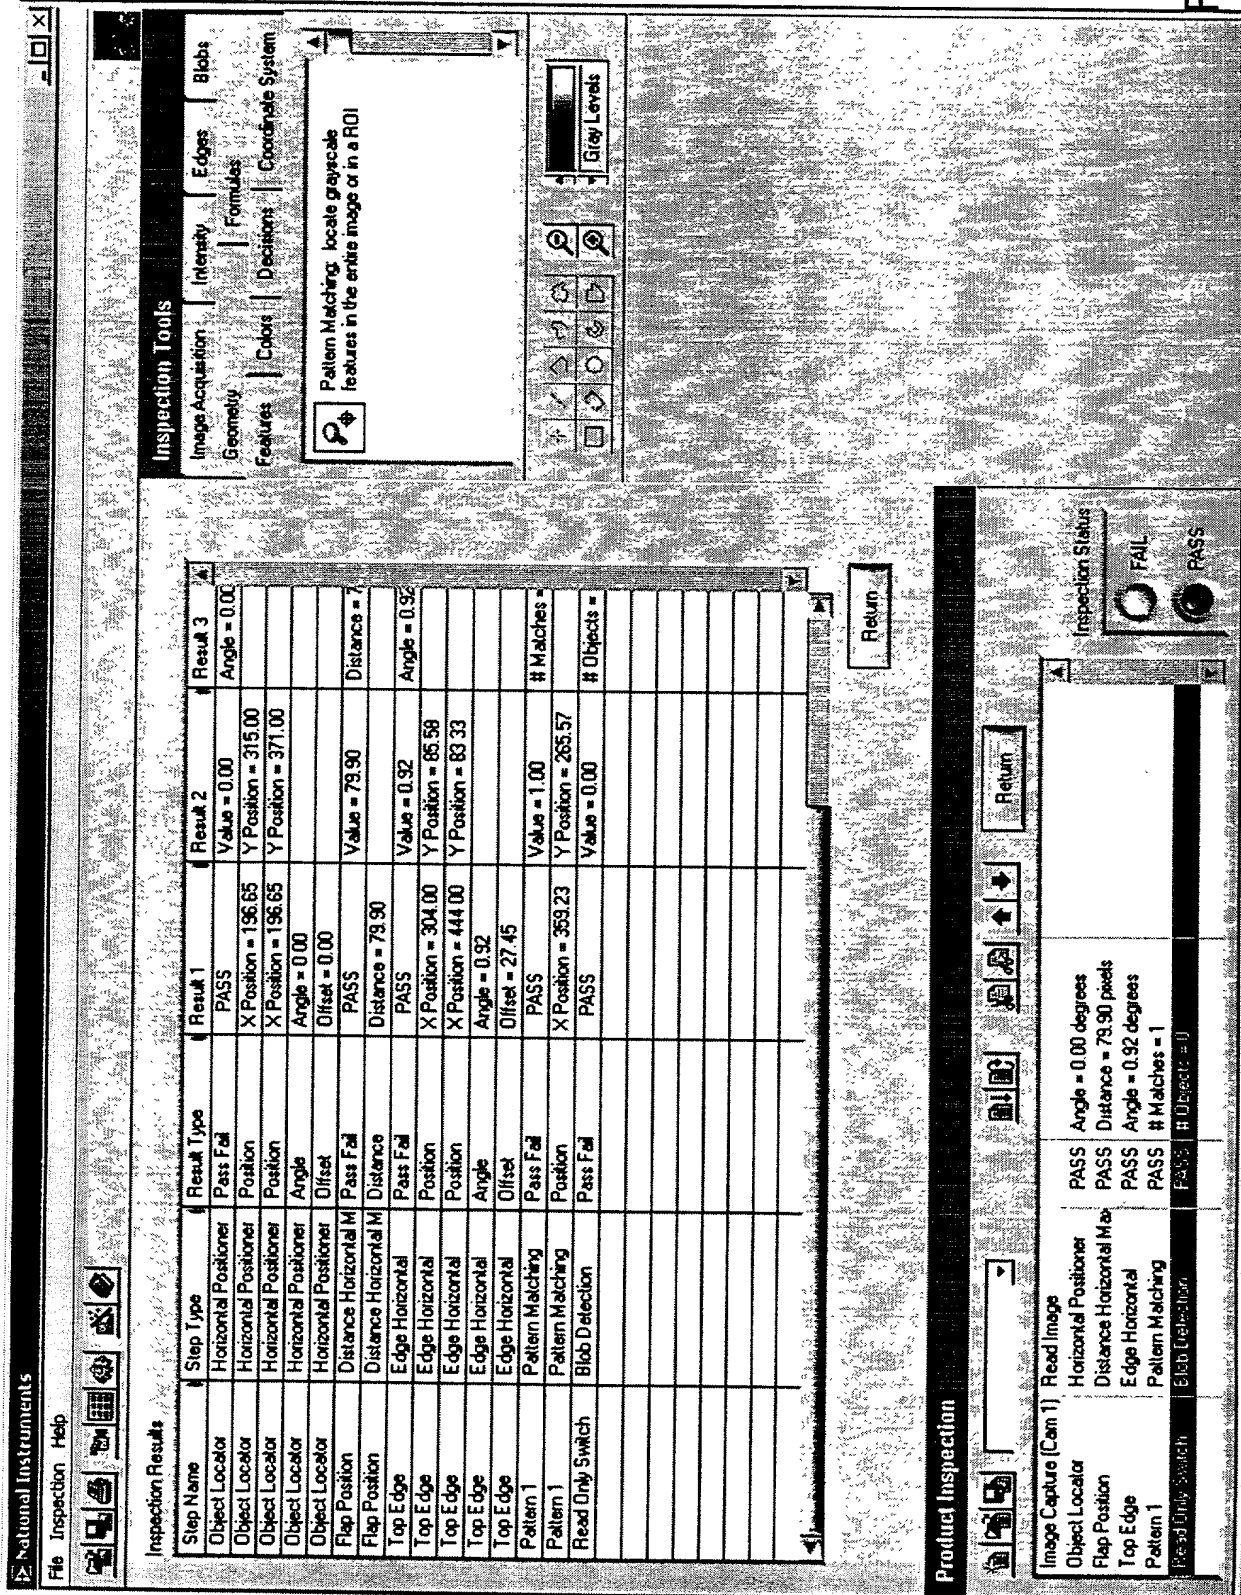


FIG. 15


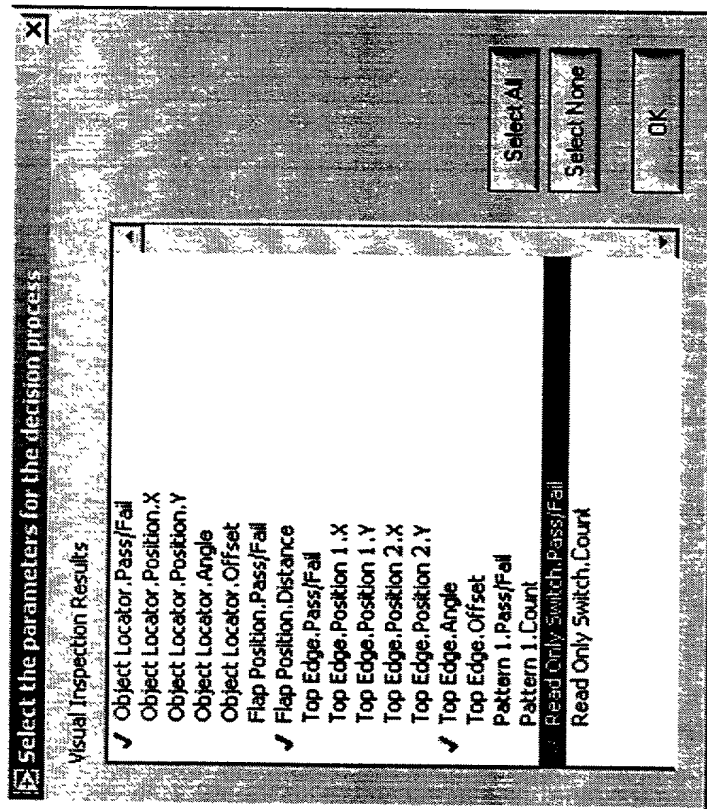


FIG. 16

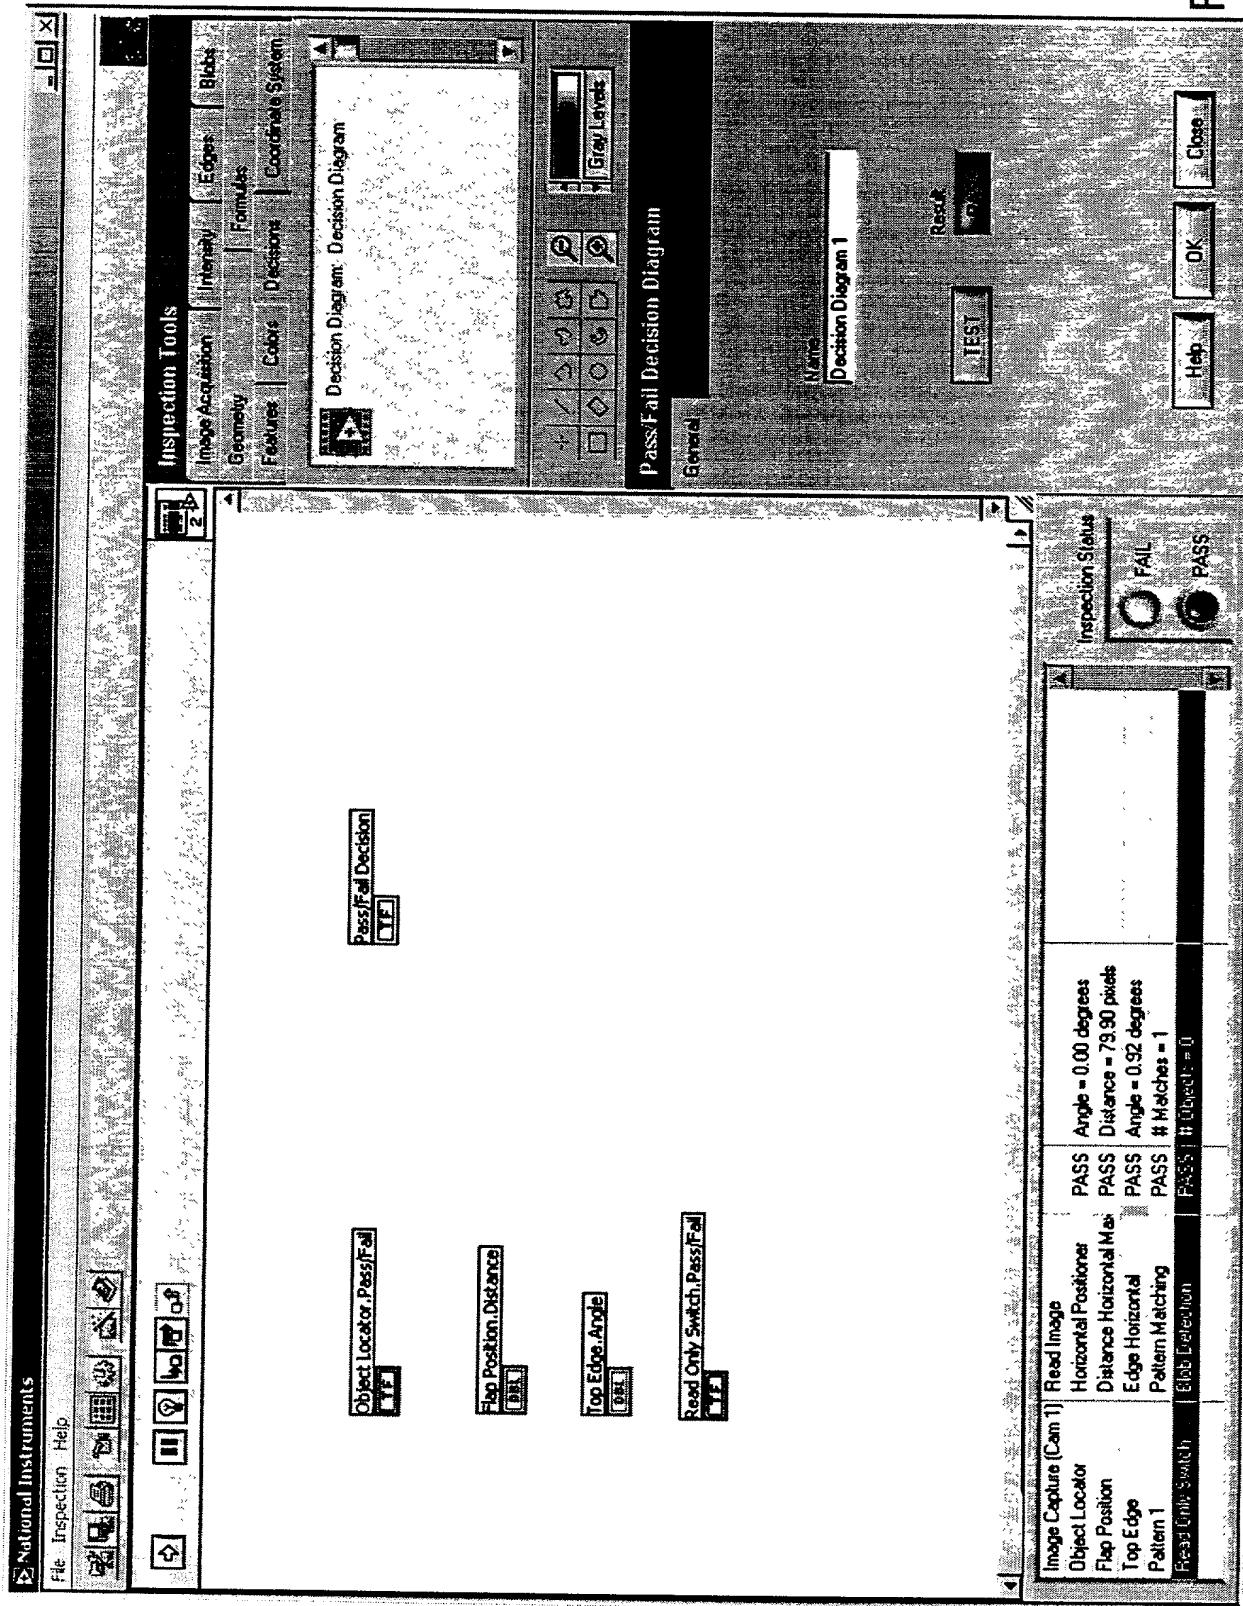

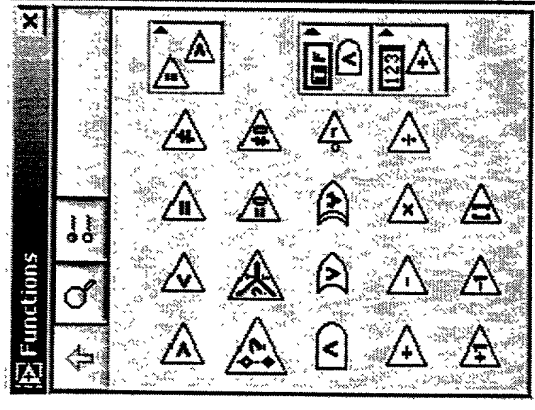
[illegible]

FIG. 18

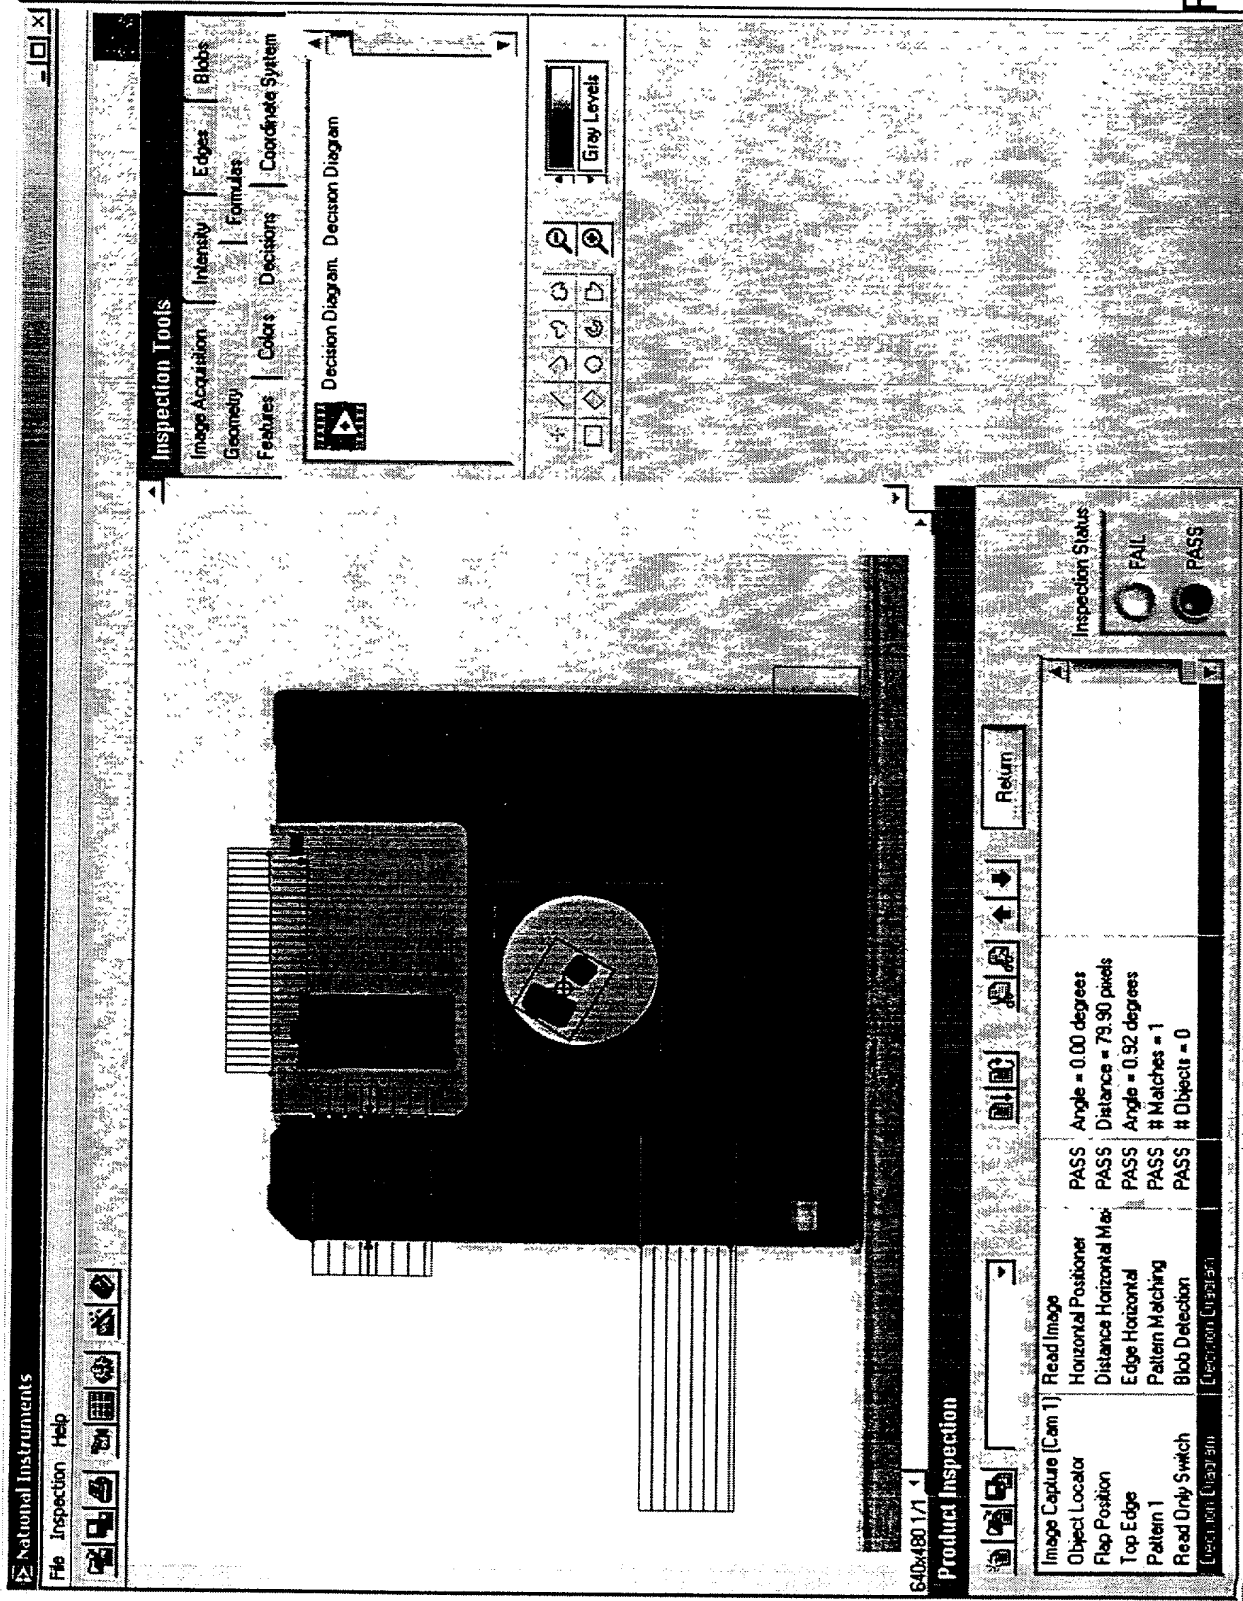


FIG. 20

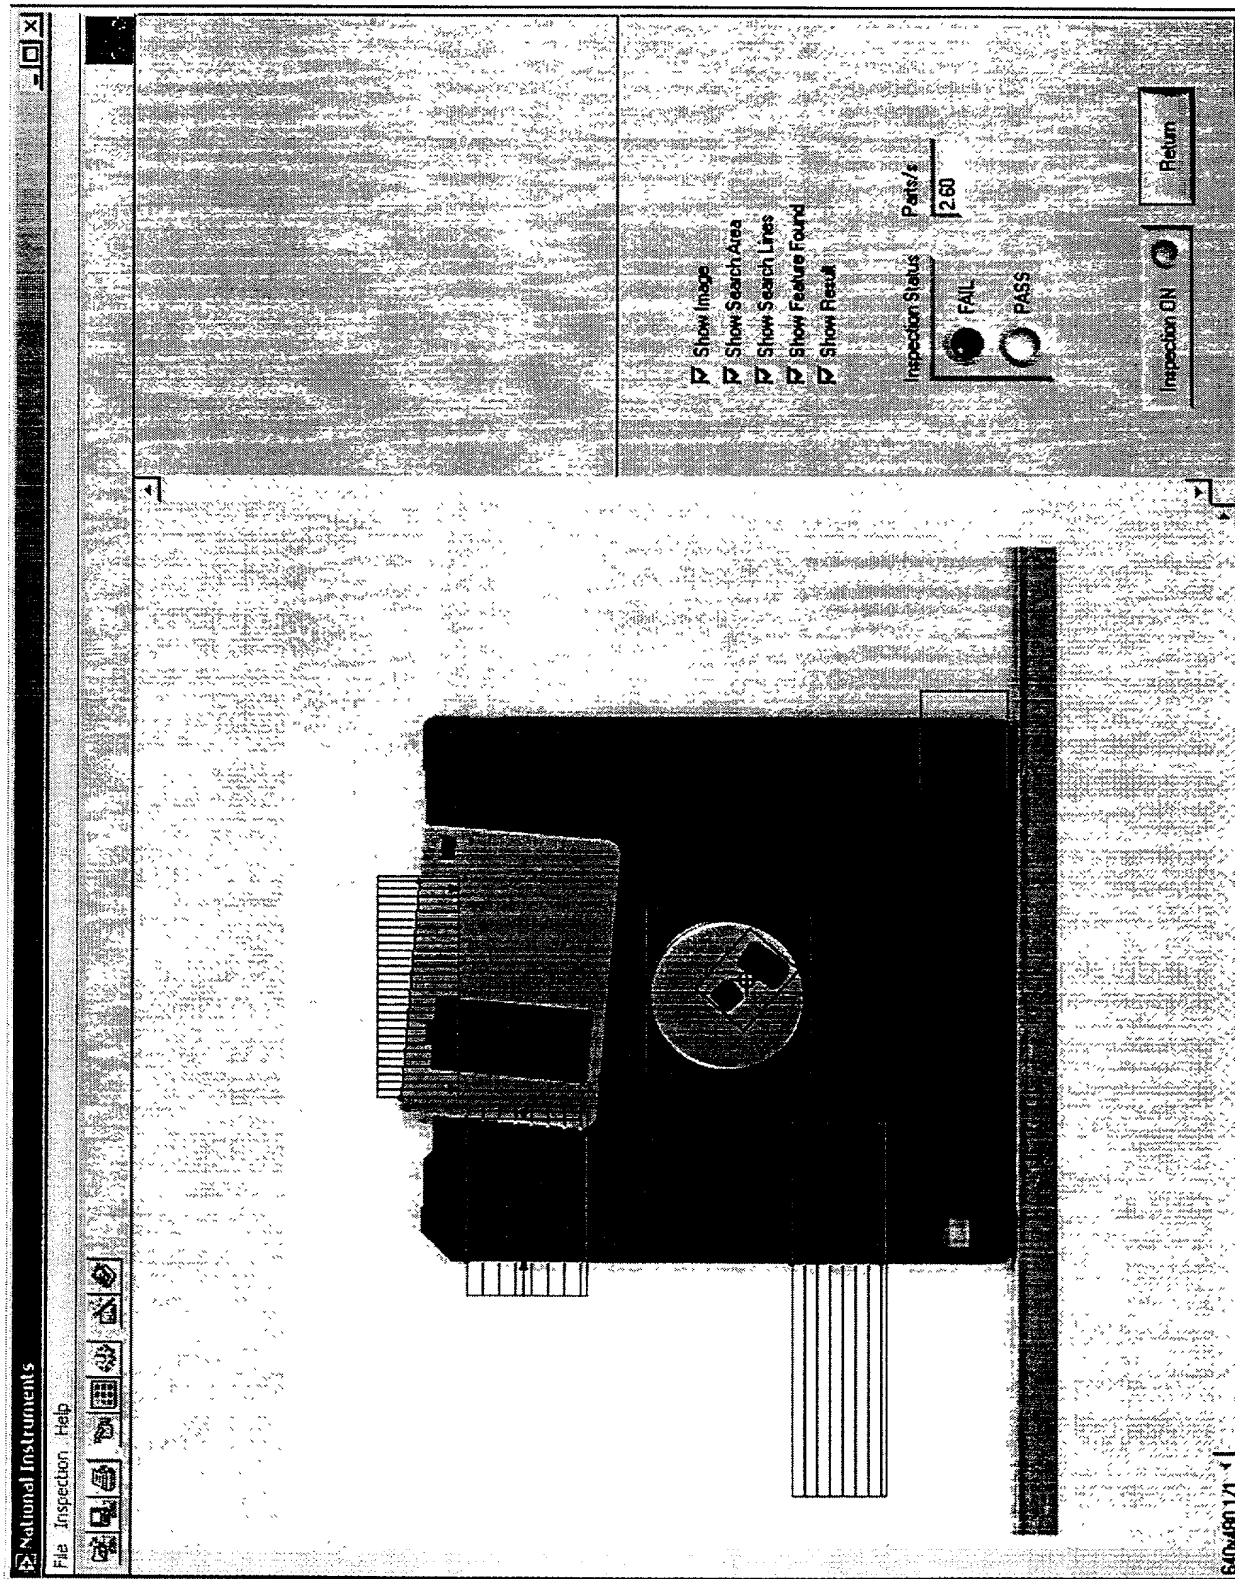


FIG. 21